

ENG

—
KRONOTERM 1976
HEAT PUMPS

USAGE


—
**OPERATING
INSTRUCTIONS**

Technician, user

—
KT – 2A

Controller

ADAPT System

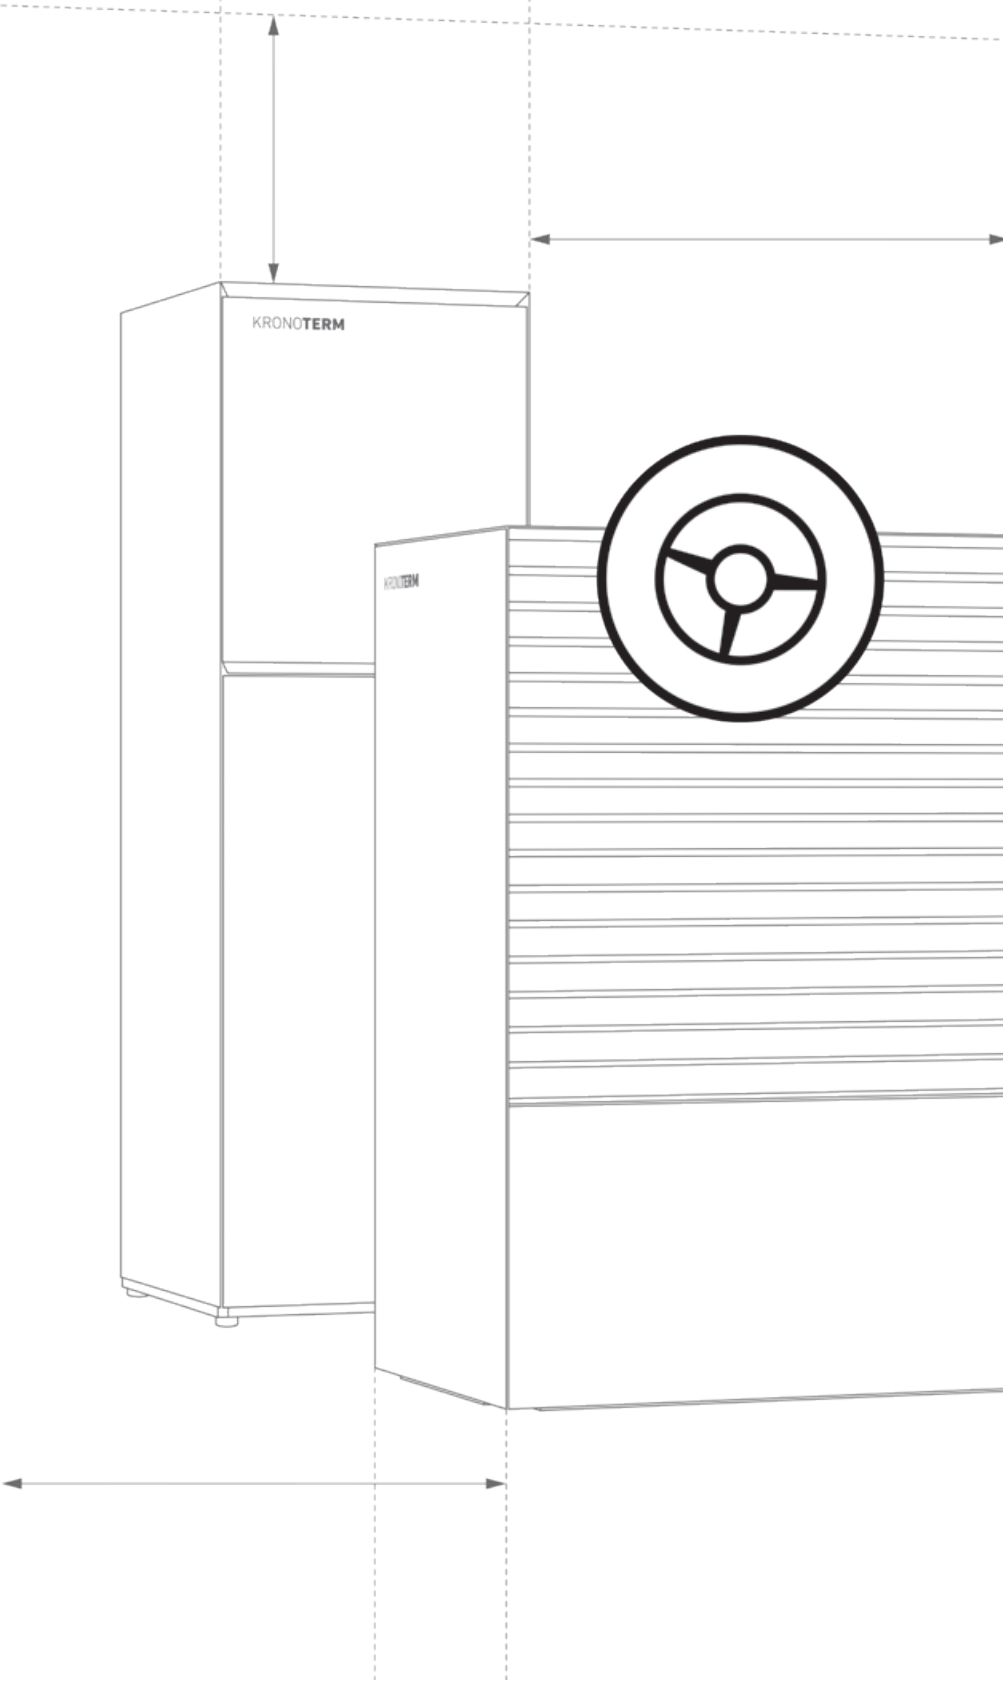



DESCRIPTION OF DOCUMENT AND APPROACH

The installation instructions are a part of the KRONOTERM instruction system, which follows our products' lifecycle from design phase to service support.

The installation instructions are the basis for our expert and professional approach to providing and maintaining KRONOTERM heat pump systems.

Operating instructions/17-19-45-6702-02

Printed in Slovenia, all publication rights reserved by Kronoterm d.o.o.

This work is protected by copyright. Any use of this document outside of the Copyright and Related Rights Act and without the express consent of Kronoterm d.o.o. (hereinafter: Kronoterm) is illegal and punishable by fine. We reserve the right to make changes.

Despite taking extensive care to ensure the accuracy of all pictures and descriptions, Kronoterm reserves the right to make corrections, changes to technical details, and changes to pictures with no prior notice. Information herein is given based on the latest available product information at the time of drafting and printing this product sheet. We also reserve the right to cease sales of an individual product or even the entire collection.

Pictures are symbolic and are only intended as a reference. Despite our efforts we cannot ensure that the products' true colors will be faithfully represented in print and on electronic screens; similarly dimensions and other graphic elements might be represented incorrectly. Products may differ from their visual representations.

Write to info@kronoterm.com for any additional questions.

TABLE OF CONTENTS

1	IMPORTANT INFORMATION	4		
1.1	SYMBOLS.....	4		
1.2	GENERAL WARNINGS.....	4		
1.3	SAFETY WARNINGS AND INSTRUCTIONS.....	4		
2	HOME SCREEN AND NAVIGATION	5		
3	GRAPHIC INTERFACE AND CONTROLLER.....	6		
3.1	LOCKING BUTTONS	6		
3.2	QUICK VIEW	6		
4	THERMOSTAT	7		
4.1	STATUS LINE IN THERMOSTAT MODE.....	7		
4.2	SETTING THE DESIRED AMBIENT TEMPERATURE	7		
4.3	SETTING PARAMETERS IN THERMOSTAT MODE	8		
4.4	SETTING THE DHW TEMPERATURE.....	9		
4.5	TURNING ON THE ONE-TIME QUICK HEATING OF DHW	9		
4.6	SETTING THE HEATING LOOP OPERATION MODE.....	10		
5	CONTROLLER AND THERMOSTAT.....	10		
5.1	STATUS LINE IN CONTROLLER MODE	11		
5.2	TURNING ON/OFF THE HEAT PUMP AND HEATING SYSTEM	12		
5.3	TURNING HEATING AND COOLING ON/OFF.....	12		
5.4	SETTING THE DESIRED AMBIENT TEMPERATURE.....	13		
5.5	SETTING THE DHW TEMPERATURE.....	13		
5.6	TURNING ON THE QUICK HEATING OF DHW ..	14		
5.7	MANUAL ACTIVATION OF ANTI-LEGIONELLA PROGRAM.....	15		
5.8	SETTING THE HEATING LOOP OPERATING MODE.....	15		
5.9	PARALLEL ACTIVATION OF THE ADDITIONAL HEATER 1.....	16		
5.10	ACTIVATION OF BACKUP HEATING MODE	16		
6	MENUS AND PARAMETERS IN OPERATING MODE.....	17		
6.1	SHORTCUT MENU	18		
6.2	SYSTEM OVERVIEW	19		
6.3	APPLIANCE ALARMS.....	20		
6.4	BUFFER TANK HEATING.....	21		
6.5	HEATING LOOPS WITH THE KT-1 OR KT-2A THERMOSTATS	22		
6.6	HEATING LOOPS WITHOUT THE KT-1 OR KT-2A THERMOSTATS	23		
6.7	HEATING THE POOL.....	24		
6.8	SEEING THE HEATING LOOP SCHEDULE.....	25		
6.9	DHW	25		
6.10	CIRCULATING DHW	26		
6.11	SETTINGS.....	27		
6.12	SETTING THE REGULATOR.....	28		
7	HEATING CURVE.....	30		
8	SETTING THE SCHEDULE	31		
8.1	MODE.....	31		
8.2	SETTING THE SCHEDULE.....	31		
9	SCREED-DRYING PROGRAM.....	33		
10	ADDITIONAL HEATER.....	33		
11	ANTI-FREEZING MODE	33		
12	ERRORS, WARNINGS AND NOTIFICATIONS	34		
12.1	DISPLAYS.....	34		
12.2	LIST OF ALARMS.....	34		

1 IMPORTANT INFORMATION

These instructions were written to inform you of all important steps to take between commissioning and further use. They describe how to set and use the appliance.

Incorrectly set parameters on the controller can lead to a malfunction or cause the appliance to stop working. Symbols in these instructions emphasize important information on mitigating risks. Follow all general safety instructions and warnings on appliance operation.

- **After installation these instructions must be given to the end user.**
- **In case the product is handed over to a third party, these instructions must also be given to said third party.**

1.1. SYMBOLS

Symbols in these instructions emphasize important information on mitigating risks.



These symbols indicate risks for the user or the appliance itself.

DANGER: A risk that could lead to grave bodily harm.

WARNING: A risk that could lead to minor bodily harm.

CAUTION: A risk that could damage or destroy the appliance.



These symbols indicate important information.

NOTE: Declaration on important information about the appliance and the manufacturer's requirements.

1.2. GENERAL WARNINGS

Improper handling of the appliance can lead to it being damaged and can cause harm to person or property.



DANGER

All instructions, examples of good practice, and legislation must be abided when wiring and inspecting electric components to ensure safe handling.



NOTE

Read these instructions thoroughly before using.

Any processing or replacement of the appliance's original integral parts will void the manufacturer's warranty for the appliance's safety and proper function. The manufacturer is not responsible for the consequences of negligent or improper appliance use. The manufacturer is not responsible for any claim for compensation in the event of appliance damage or other damage resulting from not adhering to the instructions herein.



NOTE

The warranty is voided if the appliance is installed differently from the manner prescribed herein.

Provide for the appliance's regular maintenance by a qualified service technician.

Require that the installation technician explain how the appliance works and how to use it.

Keep these instructions in a dry place in the appliance's vicinity.

1.3. SAFETY WARNINGS AND INSTRUCTIONS



DANGER

Do not clean the appliance or interfere with it while it is in operation.



NOTE

Only authorized service technicians may service and maintain the appliance.

Call the service technician that installed your appliance in the event of a disruption or malfunction in your appliance's operation.



WARNING

This appliance is not to be played with.

The appliance may only be used by people who have learned about its safe operation and who understand the potential dangers of operating such an appliance.

Children over 8 years of age and persons with reduced physical or mental capabilities and/or lacking experience and knowledge may only use this appliance under the supervision of a qualified individual.

Ensure that the appliance's operation never threatens anyone's safety. Prevent children and unqualified persons from accessing the appliance.


Unplug the appliance before any servicing.

2 HOME SCREEN AND NAVIGATION


The KT-2A Controller has 3 operational modes:



Thermostat.

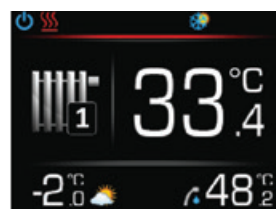

Controller for the heat pump and heating system.

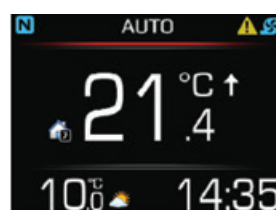


Thermostat and controller for the heat pump and heating system



NOTE

The authorized installation technician sets the KT-2A operational mode when installing the appliance.

3 GRAPHIC INTERFACE AND CONTROLLER

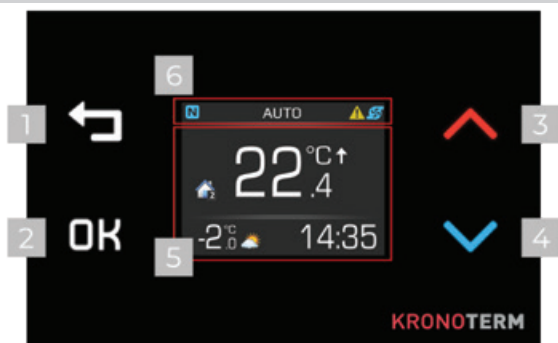


1	BACK button for: <ul style="list-style-type: none"> returning to the previous menu, undoing parameter settings in menus, exiting menus.
2	The OK button for: <ul style="list-style-type: none"> confirming settings, choosing menus.
3	The UP button for: <ul style="list-style-type: none"> scrolling up through menus, changing or increasing the value of individual parameters.
4	The DOWN button for: <ul style="list-style-type: none"> scrolling down through menus, changing or decreasing the value of individual parameters.
5	Screen for displaying menus, parameter values, settings, and the status of the appliance and/or heating system.
6	Status line to display the status quo of the heat pump and/or heating system.

3.1. LOCKING BUTTONS




Locking the buttons on the controller prevents the changing of settings by unauthorized persons.

3.2. QUICK VIEW

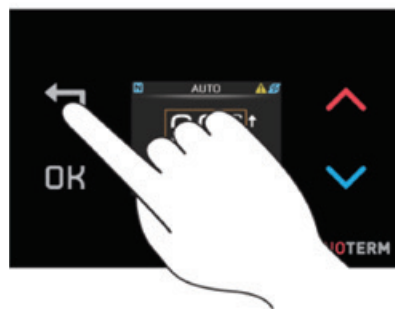

Access the Quick View by pressing the BACK button on the home screen. Press the BACK button a second time to toggle between the system overview and the weather forecast.

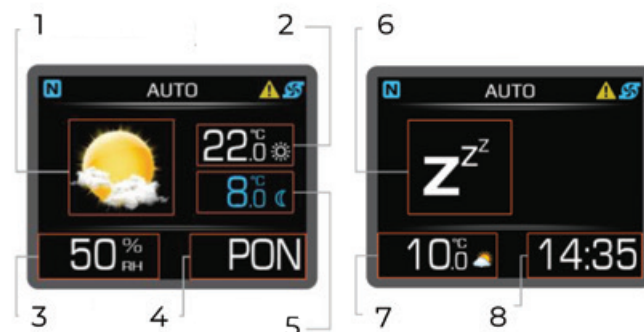

1	Weather symbol
2	High (day-time) temperature
3	Humidity
4	Weekday
5	Low (night-time) temperature
6	Icon of current operational mode
7	Outside temperature
8	Hour

i NOTE


The weather forecast feature is only activated if your appliance is connected to the internet and if you have set the device's location in the Cloud. Kronoterm.com online interface.

To lock the buttons, press the buttons OK and BACK simultaneously, and hold them for 2 seconds. The symbol is shown when buttons are locked.

To unlock the buttons, press the buttons OK and BACK simultaneously, and hold them for 2 seconds.


4 THERMOSTAT

Home screen in thermostat mode:

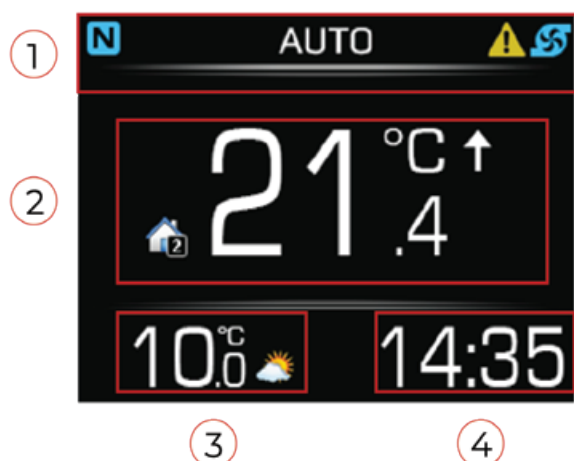

1	A grey bar in the status line shows that the KT-2A Controller is set on thermostat mode .
2	Ambient temperature.
3	Outside temperature.
4	Time.

4.1. STATUS LINE IN THERMOSTAT MODE

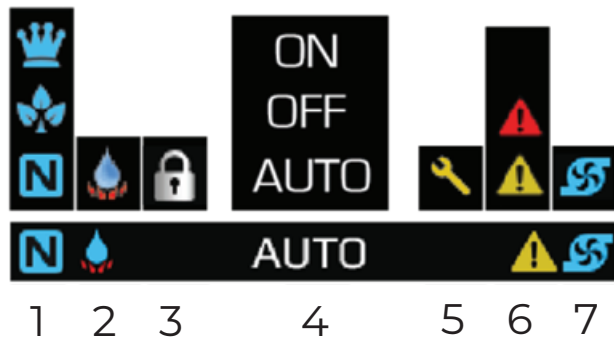

1	Heating loop operational mode: Heating loop is in NORMAL mode. Heating loop is in ECO mode. Heating loop is in COMFORT mode.
2	Quick heating DHW: Quick heating function for DHW is activated.
3	Locking buttons: Buttons are locked.
4	Heating loop operational mode: ON – the heating loop is working constantly, OFF – the heating loop is not working, AUTO – the heating loop is working according to schedule.
5	Annual inspection: Notification for an annual inspection of your heat pump – order an inspection.

6	Alarm: Warning – verify the meaning of the warning code and take appropriate measures, it is not necessary to call a service technician. Error – verify the meaning of the error code and call a service technician if necessary.
7	The heating loop's circulation pump: The heating loop's circulation pump is working.

4.2. SETTING THE DESIRED AMBIENT TEMPERATURE



Press or to show the set ambient temperature. The temperature is outlined in orange. Set the desired ambient temperature by pressing or . Confirm the change by pressing **OK** or by waiting 8 seconds for it to confirm automatically.

4.3.SETTING PARAMETERS IN THERMOSTAT MODE

Settings for the heating loop's operational mode:




ON – the heating loop is working constantly in Normal mode.

AUTO – the heating loop is working according to schedule.

OFF – the heating loop is not working

Quick heating DHW:

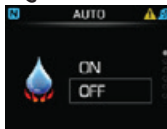

ON – quick heating for DHW is activated.

OFF – quick heating for DHW is activated

Setting the DHW temperature.



Setting the display's brightness.



Night-time screen mode, the screen dims in dark:



The screen dims in 30% dark.



The screen dims in 60% dark.



The screen dims in 100% dark.



The screen stays illuminated.

SETTING BRIGHTNESS

Table 1



Brightness 15%.



Brightness 30%.



Brightness 40%.



Brightness 60%.



Brightness 100%.

SETTING NIGHT-TIME MODE

Table 2



The screen automatically dims at 30% darkness.



The screen automatically dims at 60% darkness.



The screen automatically dims at 90% darkness.



The screen stays illuminated.




Setting parameters

Menu	Parameter name	Parameter value range	Note
	Activating the quick heating of DHW.	ON – Turn on. OFF – Turn off.	
	Operation mode.	ON – Turn on. AUTO – Working schedule. OFF – Turn off.	
	Setting brightness.	0-100 %	Values are given in Table 1.
	Setting night-time mode.	0-100 %	Values are given in Table 2.


4.4.SETTING THE DHW TEMPERATURE




Press **OK** to get to the parameter menu.
Press **▲** or **▼** to browse DHW parameters.

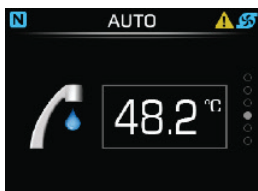

Press **OK** to begin setting parameters.

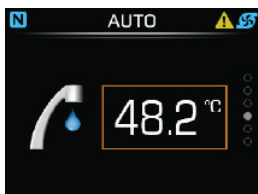

Press **▲** or **▼** to set the desired DHW temperature.

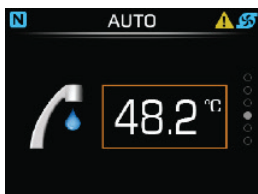


Confirm the settings by pressing **OK**.
Press **⬅** to return to home screen.


4.5.TURNING ON THE ONE-TIME QUICK HEATING OF DHW




Press **OK** to get to the parameter menu.
Press **▲** or **▼** to find the quick activation.

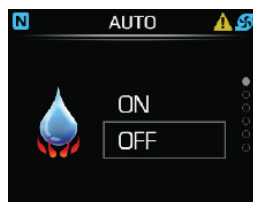


Press **OK** to begin setting parameters.

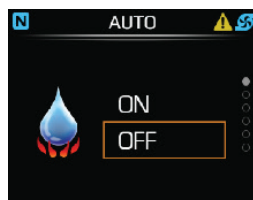

Press **▲** or **▼** to set it to ON.

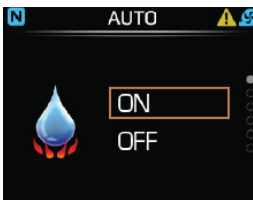

Confirm the settings by pressing **OK**.

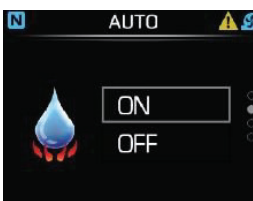

Press **⬅** to return to home screen.


4.6.SETTING THE HEATING LOOP
OPERATION MODE



Press **OK** to get to the parameter menu.
Press or to find the heating loop parameter.



Press **OK** to begin setting parameters.

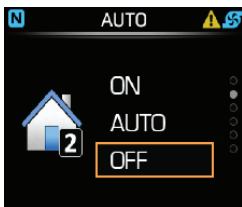

Press or to set it to **ON**.




Confirm the settings by pressing **OK**.



Press to return to home screen.


5 CONTROLLER AND THERMOSTAT

Home screen of the KT-2A controller in controller mode.

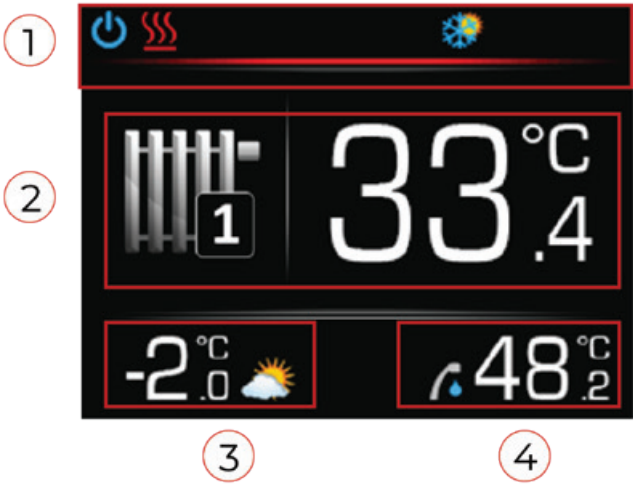

1	A red bar in the status line shows that the KT-2A is set to controller + thermostat mode.
2	Ambient temperature or water temperature in the heating loop/system.
3	Outside temperature.
4	DHW temperature.

5.1. STATUS LINE IN CONTROLLER MODE

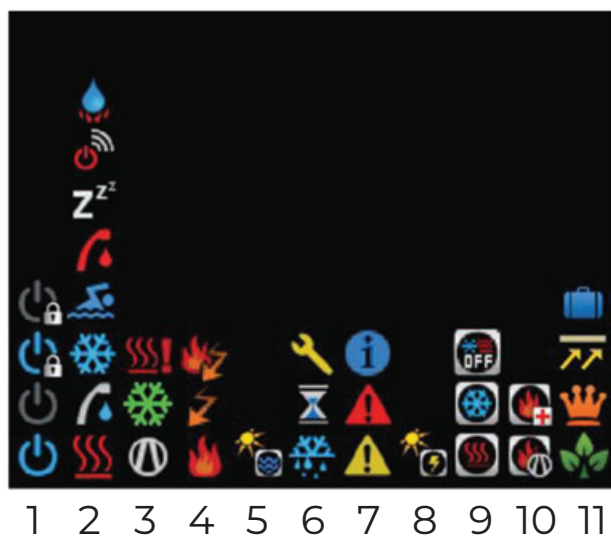


1	Heat pump status: <ul style="list-style-type: none"> The heat pump and heating system are turned on. The heat pump and heating system are turned off. Locked screen, heat pump on. Locked screen, heat pump off.
2	Heat pump operational mode: <ul style="list-style-type: none"> Heating. Heating DHW. Active cooling. Heating the pool. Manual activation of anti-Legionella program. Standby – your heat pump will wait until it needs to work. The remote deactivation signal is on. Quick heating DHW.
3	Heat pump operating mode: <ul style="list-style-type: none"> Heat pump is currently ON. Passive cooling is activated. The anti-freezing program is activated.

4	Status of additional heater: <ul style="list-style-type: none"> Additional heater 2 is active (external source). Additional heater 1 is active (internal electric heater). Both additional heaters 1 and 2 are active.
5	Heating with biomass or solar cells: <ul style="list-style-type: none"> Heating with biomass or solar cells is active.
6	Heat pump operating mode: <ul style="list-style-type: none"> Defrosting is active. The block on turning the heat pump on is active (after turning it off). You need an annual inspection of your heat pump.
7	Alarm: <ul style="list-style-type: none"> Error – verify the meaning of the error code and call a service technician if necessary. Warning – verify the meaning of the warning code and take appropriate measures, it is not necessary to call a service technician. Information - verify the information code.
8	Photovoltaic power signal: <ul style="list-style-type: none"> A signal from a PV power station is active.
9	Heating / Cooling / DHW mode: <ul style="list-style-type: none"> Heat pump is in heating and DHW heating mode. Heat pump is in cooling and DHW heating mode. Heating and cooling mode is turned off. The heat pump is only heating DHW and the pool.
10	Additional heater mode: <ul style="list-style-type: none"> The additional internal electric heater is on. Activation of backup heating mode.
11	Heating loop operation mode: <ul style="list-style-type: none"> ECO mode is active. COMFORT mode is active. Screed-drying mode is active. Vacation mode is active.


5.2. TURNING ON/OFF THE HEAT PUMP AND HEATING SYSTEM




Press **OK** to get to the main menu

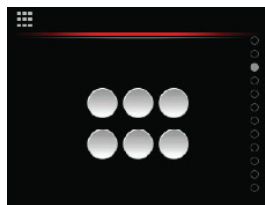


Choose the menu "**shortcut**" by pressing the button **OK**. Confirm the shortcut menu by pressing **OK**. Press **^** or **v** to find **on/off**.

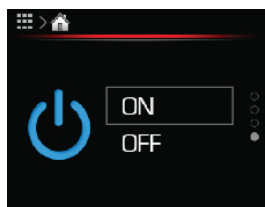

Press **OK** to begin setting parameters.

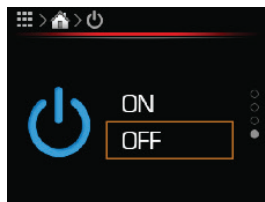


Press **^** or **v** to choose the setting **OFF** or **ON**. Confirm the settings by pressing **OK**.

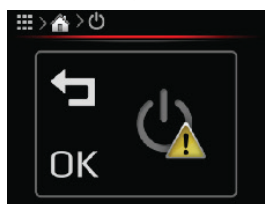


Confirm the parameter value by pressing **OK**. Cancel the parameter value by pressing **↩**. To return to the home screen press **↩** 2 times.

5.3. TURNING HEATING AND COOLING ON/OFF

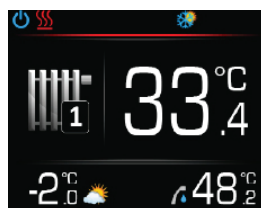


Press **OK** to get to the main menu

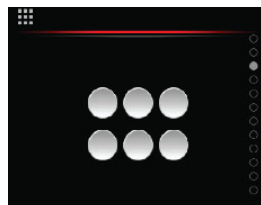


Choose the menu "**shortcut**" by pressing the button **OK**. Press **^** or **v** to find the **operational parameter**.



Press **OK** to begin setting parameters.

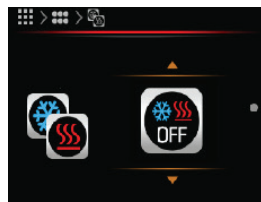

Press **^** or **v** to set parameters for the **cooling and heating DHW mode**.

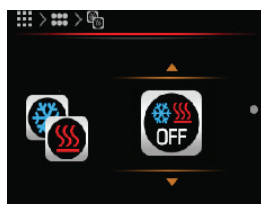

Confirm the settings by pressing **OK**. Cancel the parameter value by pressing **↩**. To return to the home screen press **↩** 2 times.

NOTE

Heating, cooling and DHW heating modes:



The appliance is in heating and DHW mode.




The appliance is in cooling and DHW mode.




The appliance is not heating or cooling the building, only DHW and pool heating is active.

5.4. SETTING THE DESIRED AMBIENT TEMPERATURE

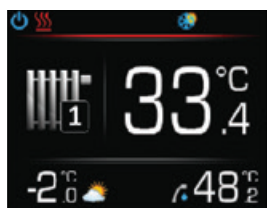


Press **OK** to get to the main menu

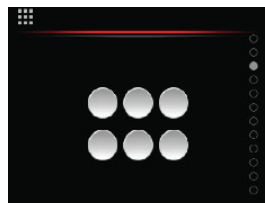


Press **▲** or **▼** to search for the **heating loop** settings.



Choose the heating loop menu by pressing **OK**.
Press **▲** or **▼** to find the ambient temperature parameter.

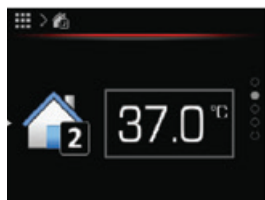

Press **OK** to begin setting parameters.

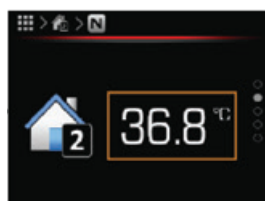


Press **▲** or **▼** to set the **desired ambient temperature**.
Confirm the settings by pressing **OK**.
Cancel the parameter value by pressing **↶**.
To return to the home screen press **↶** 2 times.


5.5. SETTING THE DHW TEMPERATURE




Press **OK** to get to the main menu.

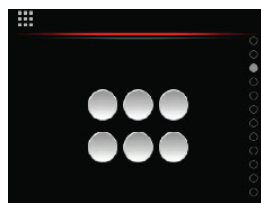

Press **▲** or **▼** to search for the DHW settings.

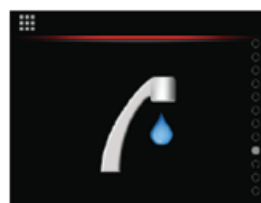


Choose the **DHW** menu by pressing **OK**.

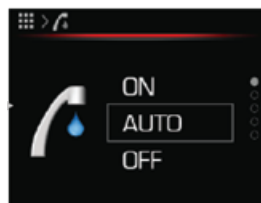


Press **▲** or **▼** to find the DHW temperature parameter.



Press **OK** to stop setting parameters.

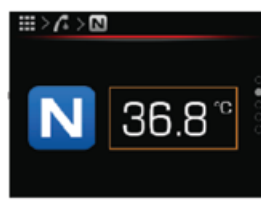


Press **▲** or **▼** to set the desired DHW temperature.

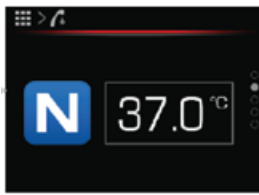


Confirm the settings by pressing **OK**.
Cancel the parameter value by pressing **↩**.
To return to the home screen press **↩** 2 times.


5.6. TURNING ON THE QUICK HEATING OF DHW

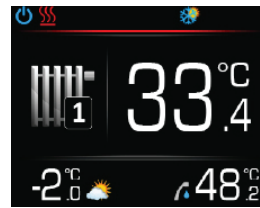


Press **OK** to get to the main menu.

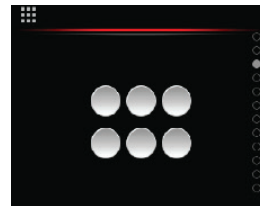


Choose the offered shortcut menu by pressing **OK**.
Press **↗** or **↘** to find the quick heating of DHW parameter.

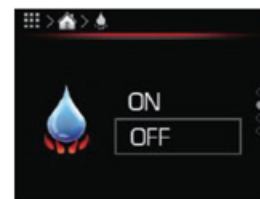

Press **OK** to begin setting parameters.

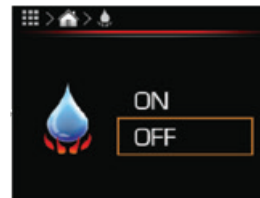


Press **↗** or **↘** to set it to ON.

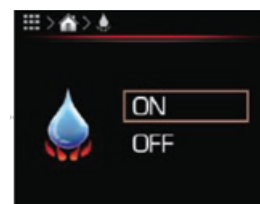


Confirm the settings by pressing **OK**.
To return to the home screen press **↩** 2 times.


5.7. MANUAL ACTIVATION OF ANTI-LEGIONELLA PROGRAM

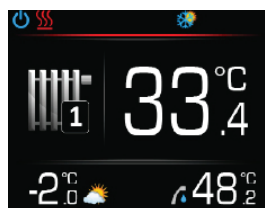


Press **OK** to get to the main menu.

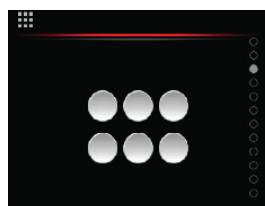


Choose the offered shortcut menu by pressing **OK**.
Press **▲** or **▼** to find the parameter to manually turn on the anti-legionella program.

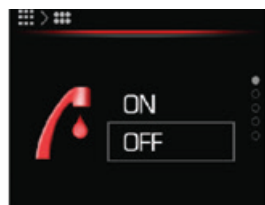

Press **OK** to begin setting parameters.

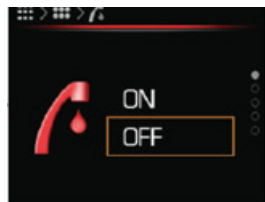


Press **▲** or **▼** to set it to ON.

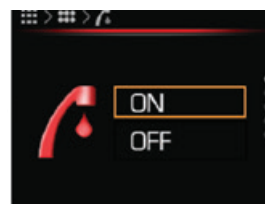


Confirm the settings by pressing **OK**.
To return to the home screen press **⬅** 2 times.


5.8. SETTING THE HEATING LOOP OPERATING MODE

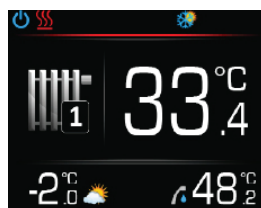


Press **OK** to get to the main menu.

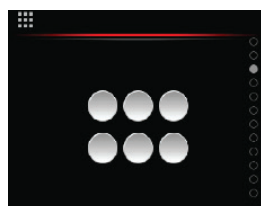


Press **▲** or **▼** to search for the heating loop settings.

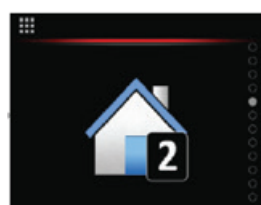

Choose the heating loop menu by pressing **OK**.

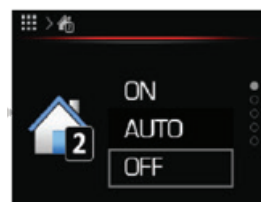


Choose the offered parameter and press **OK** to stop setting parameters.

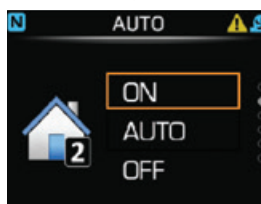


Press **▲** or **▼** set it to ON or AUTO.
Confirm the settings by pressing **OK**.
To return to the home screen press **⬅** 2 times.


5.9. PARALLEL ACTIVATION OF THE ADDITIONAL HEATER 1

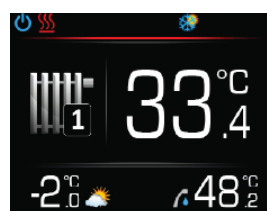


Press **OK** to get to the main menu.

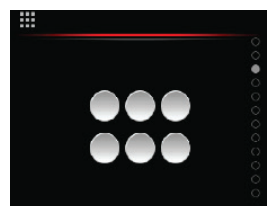


Choose the offered shortcut menu by pressing **OK**.
Press **↶** or **↷** to find the parameter to manually turn on the **additional heater 1**.

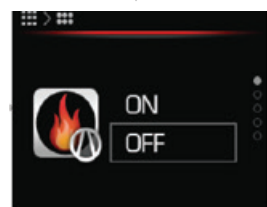

Press **OK** to begin setting parameters.

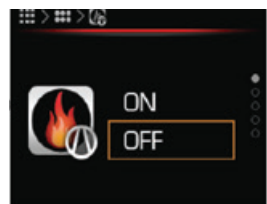


Press **↶** or **↷** to set it to ON.

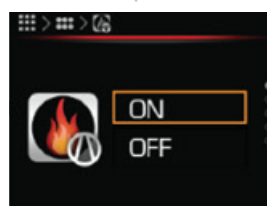


Confirm the settings by pressing **OK**.
To return to the home screen press **↶** 2 times.


5.10. ACTIVATION OF BACKUP HEATING MODE

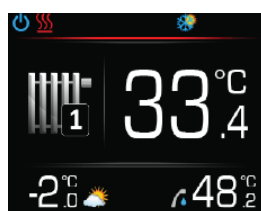


Press **OK** to get to the main menu.

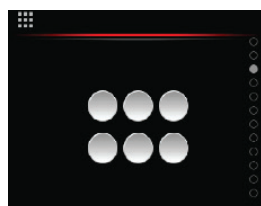


Choose the offered shortcut menu by pressing **OK**.
Press **↶** or **↷** to **find the parameter to manually turn on the reserve heating mode**.

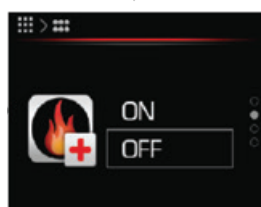

Press **OK** to begin setting parameters.

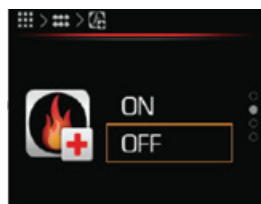

Press **↶** or **↷** to set it to ON.

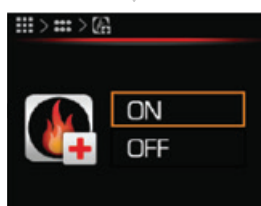


Confirm the settings by pressing **OK**.
To return to the home screen press **↶** 2 times.

6 MENUS AND PARAMETERS IN OPERATING MODE

NOTE

You can set various temperatures and operating modes for the heating loop, pool, buffer tank, and DHW tank.

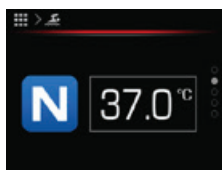

NORMAL


The Normal Regulator mode keeps your set temperature.



ECO

The ECO Regulator mode keeps the temperature at the set ECO parameter lower than the Normal temperature.

For cooling, the ECO Regulator mode keeps the temperature at the set ECO parameter higher than the Normal temperature.

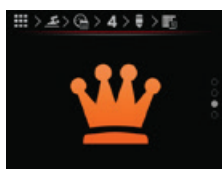

COMFORT

The COMFORT Regulator mode keeps the temperature at the set COMFORT parameter lower than the NORMAL temperature.

For cooling, the COMFORT Regulator mode keeps the temperature at the set COMFORT parameter higher than the Normal temperature.

NOTE

The KT-2A Controller allows for unlimited temperature parameters, and the system automatically adjusts the temperature to the allowed values.


6.1. SHORTCUT MENU



Shortcut

Menu	Parameter name	Parameter value range	Note
	Turn on Holiday mode	ON – Turn on OFF – Turn off	ON – set the number of vacation days 0 – 999.
	Mode	Heating Cooling OFF AUTO	OFF – only DHW is heated (pool option).
	Quick heating DHW	ON – Turn on OFF – Turn off	
	Anti-legionella heating	ON – Turn on OFF – Turn off	Up to 67 °C (with electric heater).
	Pool heating loop	ON – Turn on AUTO – Working schedule OFF – Turn off	
	Turn on additional source	ON – Turn on OFF – Turn off	Turn on additional source.
	Turn on additional source	ON – Turn on OFF – Turn off	Turn on additional source.
	Turn on heat pump	ON – Turn on OFF – Turn off	
	Filling the system with water	ON – Turn on OFF – Turn off	Adding water to the heating system up to 1.3 bar.

6.2. SYSTEM OVERVIEW

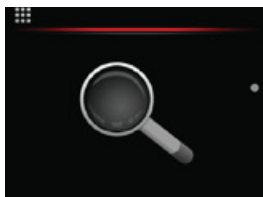


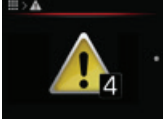


System overview

Menu	Parameter name	Parameter value range	Note
	Pipe temperatures	Supply pipe temperature Return pipe temperature System pressure	Show the temperature and water pressure.
	Buffer tank	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of buffer tank temperature values.
	DHW	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of DHW temperature values.
	Heating loop 1	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of heating loop 1 temperature values
	Heating loop 2	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of heating loop 2 temperature values
	Heating loop 3	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of heating loop 3 temperature values
	Heating loop 4	34.0°C Actual temperature 36.0°C Calculated (desired) temperature	Overview of heating loop 4 temperature values
	Pool	23.0°C Actual temperature OFF Turn off	Overview of pool temperature values.
	Alternative source	Actual temperature	Overview of alternative source temperature values.
	System communication status	ON WEB status ON Link status ON MB connection status	


6.3. APPLIANCE ALARMS



Appliance alarms

Menu	Parameter name	Parameter value range	Note
	Error	2114-b3 to 2335-b8	There is a disturbance in operation. The heat pump and heating system do not work.
	Warning	2115-b1 to 2341-b4	There was a light operational disturbance. The heating system works.
	Information	2117-b13 Remote shut downp	There is information regarding events in the operation of the heating system. The heating system works normally.
	Warning or error		The warning or error was fixed.

6.4.BUFFER TANK HEATING

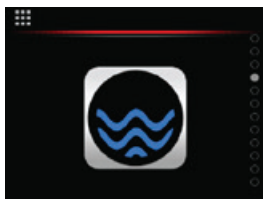

Buffer tank

Menu	Parameter name	Parameter value range	Note
	Buffer tank operational mode	ON – Turn on AUTO – Working schedule OFF – Turn off	
	Buffer tank ECO mode	-10 °C/ +10 °C	ECO lowering the temperature by the set value.
	Buffer tank COMFORT mode	-10 °C/ +10 °C	COMFORT raising the temperature by the set value.
	Setting the schedule	1-7 days 0-4 h	Weekly operational schedule.
	Weather mode -15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning.	Heating curve setting at -15°C ambient temperature.
	Weather mode +15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning.	Heating curve setting at +15°C ambient temperature.

NOTE

If adaptive regulation is turned off, the KSM regulator calculates the temperature of the water in the buffer tank based on the heating curve with reference temperatures at -15 °C and +15 °C.

For heating at a constant temperature (regardless of ambient outside temperature) set both parameters of the heating curve at -15 °C and +15 °C to the same value.


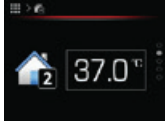
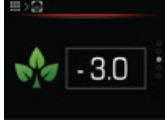



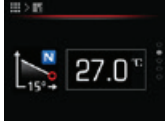
6.5. HEATING LOOPS WITH THE KT-1 OR KT-2A THERMOSTATS

NOTE

During the commissioning process set one KT-1 or KT-2A for each heating loop.



Heating loop


Menu	Parameter name	Parameter value range	Note
	Heating loop operational mode	ON – Turn on AUTO – Working schedule OFF – Turn off	
	Desired ambient temperature	+17 °C/+27 °C	Set the desired ambient temperature on which basis the KSM regulator calculates the right water temperature in the heating loop.
	ECO ambient mode	-10 °C/+10 °C	ECO lowering the ambient temperature by the set value.
	COMFORT ambient mode	-10 °C/+10 °C	COMFORT raising the ambient temperature by the set value.
	Setting the schedule	1-7 days 0 – 24 h	Weekly operational schedule.
	Weather mode -15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning.	Heating curve setting at -15°C ambient temperature.
	Weather mode +15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning	Heating curve setting at +15°C ambient temperature.

NOTE

If adaptive regulation is turned off, the KSM regulator calculates the temperature of the water in the heating loop based on the heating curve with reference temperatures at -15 °C and +15 °C.

For a constant water temperature in the heating system set the setting at -15°C and at +15°C to the same value.

6.6. HEATING LOOPS WITHOUT THE KT-1 OR KT-2A THERMOSTATS

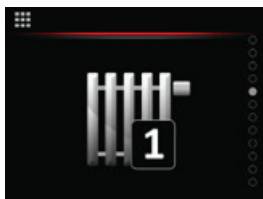

Heating loop


Menu	Parameter name	Parameter value range	Note
	Heating loop operational mode	ON – Turn on AUTO – Working schedule OFF – Turn off	
	ECO loop mode	-10 °C/+10 °C	ECO lowering the temperature of the heating loop by the set value.
	COMFORT loop mode	-10 °C /+10 °C	COMFORT raising the temperature of the heating loop by the set value.
	Setting the schedule	1-7 days 0-24 h	Weekly operational schedule.
	Weather mode -15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning.	Heating curve setting at -15°C ambient temperature.
	Weather mode +15 °C	This is set only if adaptive regulation is turned off. The value depends on the setting at commissioning.	Heating curve setting at +15°C ambient temperature.

NOTE

If there is no KT-1/KT-2A thermostat, adaptive regulation is turned off. The KSM regulator calculates the temperature of the water in the heating loop based on the heating curve with reference temperatures at -15 °C and +15 °C.

For a constant water temperature in the heating system set the setting at -15°C and at +15°C to the same value.

6.7. HEATING THE POOL

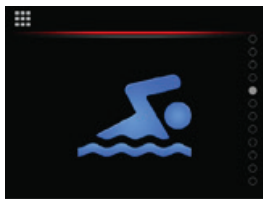

Pool

Menu	Parameter name	Parameter value range	Note
	Pool heating loop operational mode	ON – Turn on AUTO – Working schedule OFF – Turn off	
	Setting the pool loop temperature	+15 °C to 40 °C	Set the desired pool water temperature.
	ECO pool mode	-10 °C/+10 °C	ECO lowering the pool temperature by the set value.
	COMFORT pool mode	-10 °C /+10 °C	COMFORT raising the pool temperature by the set value.
	Setting the schedule	1-7 days 0-24 h	Weekly operational schedule.







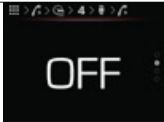

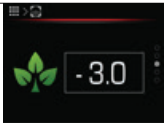

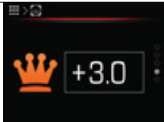
NOTE

If there is no KT-1/KT-2A thermostat, adaptive regulation is turned off. The KSM regulator calculates the temperature of the water in the heating loop based on the heating curve with reference temperatures at -15 °C and +15 °C.

For a constant water temperature in the heating system set the setting at -15°C and at +15°C to the same value.

6.8.SEEING THE HEATING LOOP SCHEDULE


The schedule allows up to 6 room or water temperature transitions in one day.

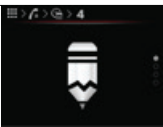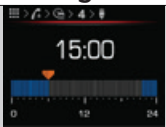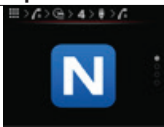Menu	Weekly overview	Choose settings	Settings	Operational mode
 Schedule	 Choose day	 Edit	 Setting interval	 Normal mode
		 Copy		 Turn off
		 Paste		 ECO mode
		 Delete		 COMFORT mode


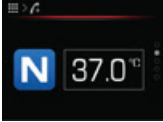
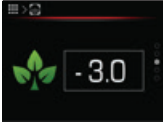


You can set operational schedules for:

- heating loops 1 – 4,
- buffer tank heating loop,
- pool heating loop.

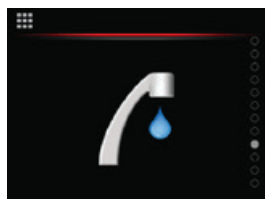6.9. DHW



DHW

Menu	Parameter name	Parameter value range	Note
 ON AUTO OFF	DHW heating mode	ON – Turn on AUTO – Working schedule OFF – Turn off	
 N 37.0	Desired DHW temperature	+25 °C/+55 °C	Set the temperature of the water in the DHW tank.
 -3.0	ECO DHW heating	-10 °C/+10 °C	ECO lowering the DHW temperature by the set value.
 +3.0	COMFORT DHW heating	-10 °C/+10 °C	COMFORT raising the DHW temperature by the set value.
 Schedule	Setting the schedule	1-7 dni 0-24 h	Weekly operational schedule.

6.10. CIRCULATING DHW



Circulating DHW

Menu	Parameter name	Parameter value range	Note
	Setting the schedule	1–7 days 0–24 h	The schedule allows up to 6 temperature transitions per day.

6.10.1. SETTING THE SCHEDULE FOR CIRCULATING DHW

The schedule allows up to 6 room or water temperature transitions per day, every day of the week.


Menu	Weekly overview	Choose settings	Settings	Operational mode
 Schedule	 Choose day	 Edit	 Setting interval	 Turn on circulation in NORMAL mode.
		 Copy		 Turn off circulation.
		 Paste		
		 Delete		

6.10.2. SETTING ANTI-LEGIONELLA HEATING

Setting and activating a function requires 3 parameters:

Menu	Parameter name	Parameter value range	Note
	Temperature of anti-Legionella heating	60–75 °C	Water at a temperature of 75°C eliminates Legionella in 10 minutes, while water at 60°C eliminates it in 25 minutes.
	Interval	0–99 days	Activate the function by entering the heating period. Turn the function off by setting the heating period from 24 to 0.
	Beginning of heating	00:00–24:00	Changing the start time sets the beginning of heating.


6.11.SETTINGS

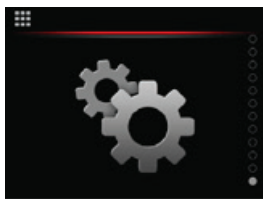

Setting

Menu	Parameter name	Parameter value range	Note
	Temperature offset	-4 °C/+4 °C	
	Heating loop operational mode	ECO AUTO COMFORT	General heating loop operating mode.
	Switching operational modes	ON – automatic switch OFF – deactivate automatic switch	ON - automatic switch between heating and cooling. If you deactivate automatic switching, you must ensure to manually switch modes.
	Screed-drying	ON – Turn on OFF – Turn off	Program sušenja estriha.
	Heating system pressure	1 – 1.3 bar	The heating system pressure can be max. 2.5 bar.
	Adaptive curve loop 1	ON – Turn on OFF – Turn off	Adaptive regulation automatically turns off if it is set that way at commissioning.
	Adaptive curve loop 2	ON – Turn on OFF – Turn off	Adaptive regulation automatically turns off if it is set that way at commissioning.
	Adaptive curve loop 3	ON – Turn on OFF – Turn off	Adaptive regulation automatically turns off if it is set that way at commissioning.
	Adaptive curve loop 4	ON – Turn on OFF – Turn off	Adaptive regulation automatically turns off if it is set that way at commissioning.


6.12. SETTING THE REGULATOR

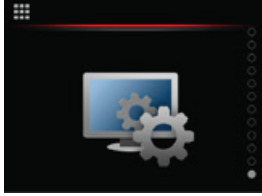

Regulator settings

Menu	Parameter name	Parameter value range	Note
	Setting the hour	0 – 24 h	Setting the hour.
	Setting the date	1 – 31 days 1 – 12 months	Setting the date.
	Setting brightness	0 – 100%	See Table 1.
	Setting night-time mode	ON – Turn on OFF – Turn off	See Table 2.
	Cloud settings	Generating a registration code (Cloud.Kronoterm).	
	Network settings		
	System information	Regulator information	
	Advanced settings	Accessing the service menu	Access only allowed for authorized persons.

6.12.1. NETWORK SETTINGS

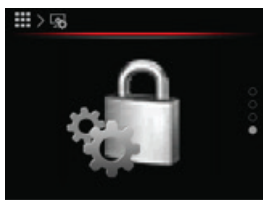

Network settings

Menu	Parameter name	Parameter value range	Note
	Setting DHCP	ON - Turn on OFF - Turn off	
	Setting IP		
	Setting Mask		
	Setting GATEWAY		
	Setting DNS1		
	Setting DNS2		

6.12.2. SYSTEM INFORMATION



Informacije o sistemu

Menu	Parameter name	Parameter value range	Note
	KT-2A regulator information		
	KSM information		
	WEB module information		
	Operating hours		We distinguish between operating hours and counters.



7 HEATING CURVE

The KSM regulator regulates the heating water temperature (buffer tank, heating loop) based on the current outdoor air temperature. In case you also install a KT-1 or KT-2A also the room temperature is also taken in to the calculation.

The lower the outdoor temperature, the greater the heat loss, and to compensate for this loss the temperature of heating water must be higher.

The higher the outdoor temperature, the lower the heat loss, and to compensate for the difference the temperature of heating water must be lower.

The slope of the heating curve is set at 2 points. The first applies to an outdoor temperature of -15°C , and the other to $+15^{\circ}\text{C}$. For cooling, these reference points are $+20^{\circ}\text{C}$ and $+40^{\circ}\text{C}$.

Menu	Parameter name	Parameter value range	Note
	Weather mode -15°C	Parameter value range This is set depending on the heating system (floor, radiator, convection, etc.).	The parameter value is the temperature of the heating water based on the reference ambient outdoor air temperature of -15°C . Set this to match the heating system (floor, radiator, convection, etc.). If the air outside is colder than 0°C (e.g. -7°C) and it is cold inside, increase the value of the weather mode parameter -15°C . Contrarily, if it is too warm inside, lower this parameter.
	Weather mode $+15^{\circ}\text{C}$	Set this to depend on the heating system (floor, radiator, convection, etc.).	Vrednost parametra predstavlja temperaturo ogrevalne vode pri referenčni zunanji temperaturi zraka $+15^{\circ}\text{C}$. Vrednost nastavite glede na vrsto ogrevalnega sistema (talno, radiatorsko, konvektorsko ogrevanje) If the air outside is warmer than 0°C (e.g. $+7^{\circ}\text{C}$) and it is cold inside, increase the value of the weather mode parameter $+15^{\circ}\text{C}$. Contrarily, if it is too warm inside, lower this parameter.

NOTE

The factory setting of the heating curve at $+15^{\circ}\text{C}$ (-15°C) for the buffer tank and heating loop can be changed in the buffer tank and heating loop settings. The adaptive curve must be turned off to set these parameters.

8 SETTING THE SCHEDULE

8.1. MODE

The operational mode of specific elements of the heating system (heating, cooling, loops 1, 2, 3, and 4, DHW, the pool, quiet mode, and circulation) can be adjusted for time by using the schedule function.

You can set 4 modes for heating, cooling, mixed loops, heating DHW, and heating the pool:

- **OFF:** heating/cooling is turned off.
- **Normal:** whether heating or cooling, the regulator holds the desired temperature.
- **ECO:** in this mode the regulator keeps the temperature at the set ECO parameter lower than the Normal temperature. For cooling in this mode, the regulator keeps the temperature at the set ECO parameter higher than the Normal temperature.
- **COMFORT:** in this mode the regulator keeps the temperature at the set COMFORT parameter higher than the Normal temperature. For cooling in this mode, the regulator keeps the temperature at the set COMFORT parameter lower than the Normal temperature.

You can set two operational modes for circulating DHW:

- **OFF: the circulation pump is turned off**
- **CIRCULATION: the circulation pump is turned on**


8.2.SETTING THE SCHEDULE

NOTE

We recommend that you set your schedules online at cloud.KRONOTERM.com or with the mobile app. Read the instructions on using our cloud interface.


The schedule allows for up to 6 temperature transitions in a single day, every day of the week.

Here is an example of how to set the desired temperature:

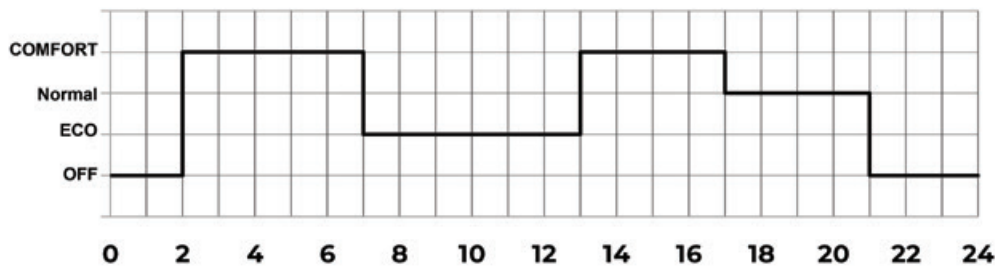

2:00	Heating in COMFORT mode turns on (the temperature is higher by the COMFORT value than the NORMAL temperature).
7:00	Heating switches to ECO mode (the temperature is lower by the ECO value than the NORMAL temperature).
13:00	Heating switches back to COMFORT .
17:00	Heating switches to NORMAL mode (temperature is kept at the value set for NORMAL).
21:00	Heating is turned OFF .


Here's an example of setting schedules:

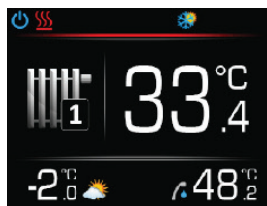


Press **OK** to get to the main menu.



Press **^** or **v** to search for the **heating loop** settings.

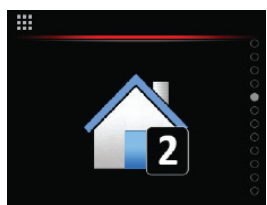

Choose the heating loop menu by pressing **OK**

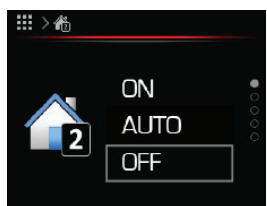

Press **^** or **v** choose the **Schedule** parameter.



Confirm the settings by pressing **OK**




Press **^** or **v** to choose a day to set a schedule.

Confirm the settings by pressing **OK**.




Press **^** or **v** to choose the Edit parameter.

Follow the instructions below to copy a schedule*.

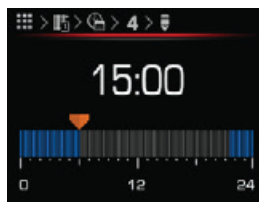

Press **^** or **v** to set the schedule hour.

Confirm the settings by pressing **OK**.

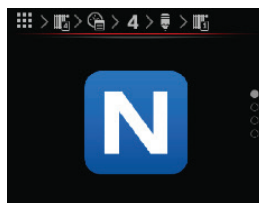

Press **^** or **v** to choose **NORMAL**, **ECO**, **OFF**, or **COMFORT** operational mode.

Confirm the settings by pressing **OK**

To return to the home screen press **←**

*Copying schedules



Press  or  to choose the **copy** parameter.

Confirm the settings by pressing **OK**



Press  or  to choose which day to copy parameter.

Confirm the settings by pressing **OK**




Press  or  to choose **paste**.

Confirm the settings by pressing **OK**



Press  or  to choose a day.

Confirm the settings by pressing **OK**

To return to the home screen press 

9 SCREED-DRYING PROGRAM

How to set and activate the screed-drying program is described in the commissioning protocol. During commissioning the technician will set it, turn it on, adjust it if needed, and explain the program to you.

10 ADDITIONAL HEATER

The KSM regulator allows for 2 additional heaters.

a) Additional heater 1 is a built-in flow through electric heater that is used if the heat pump has a fault or if additional heat is needed to heat the system.

b) Additional heater 2 is an external electric heater, oil or gas heater that can but used as an additional heat generator in the heating system.

An authorized commissioning technician sets the additional heater 1 and 2.

Manually turn on the additional heater in the shortcut menu on the KT-2A or on the web and mobile HomeCloud app. The additional heater turns on automatically if needed.

In backup mode the additional heater 1 is turned on.

11 ANTI-FREEZING MODE

If there is a fault and the system is in standby mode, the heat pump switches to anti-freezing mode. In this mode water in the heating system is limited to the minimal temperature.

Additional heater 1 is always used in anti-freezing mode.

12 ERRORS, WARNINGS AND NOTIFICATIONS

In the alarm menu you will see a list of faults, warnings, and notifications that arise during the device's operation.




Press **OK** to enter the menu.



Choose the offered diagnostic menu by pressing **OK**.


The following submenu will open. When you make a selection, you will see the code for faults, warnings, and notifications.

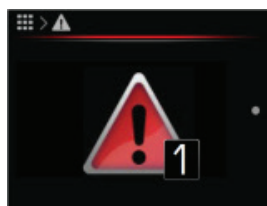

Error:
An error occurred that shut the whole system down.




Error code:

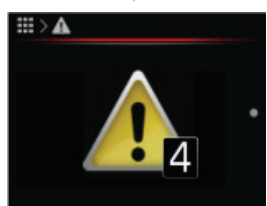


Warning: A warning occurred that did not shut the system down.



Warning code:

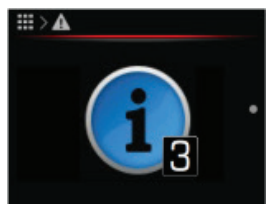

Notification: Important information was given during the appliance's operation.

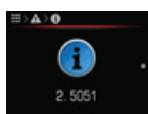

Notification code:

12.1.DISPLAYS

All faults, warnings, and notifications are shown as a code comprised of a 4-digit number and a 2-digit number/letter combo.

All necessary instructions for parsing and understanding these codes is given below.

12.2. LIST OF ALARMS

The diagnostic menu records all events during the appliance's operation. Priority events are shown in the status line with a graphic display in the form of a red or yellow exclamation point. In addition to the recorded error and warnings, other event codes can also appear in the diagnostic menu.

12.2.1. NOTIFICATIONS



2117-b13	Remote shutdown
----------	-----------------

12.2.2. WARNING LIST



2115-b1	Failure module 2
2117-b10	Outlet minimum temperature
2330-b5	Refrigerant loss
2339-b0	Temperature sensor fault – DHW (T1)
2339-b1	Temperature sensor fault – outdoor heating system (T2)
2339-b2	Temperature sensor fault – 1st loop (T3)
2339-b3	Temperature sensor fault – 2nd loop (T4)
2339-b4	Temperature sensor fault – 3rd loop (T5)
2339-b5	Temperature sensor fault – 4th loop (T6)
2339-b6	Temperature sensor fault – pool (T7)
2339-b7	Temperature sensor fault – solar/biomass (T8)
2339-b8	Temperature sensor fault – buffer tank 1 (T9)
2339-b9	Temperature sensor fault – buffer tank 2 (T10)
2339-b12	Temperature sensor fault – outlet HP (T15)
2339-b13	Temperature sensor fault – inlet HP (T16)
2339-b14	Temperature sensor fault – outlet after elect. heater (T13)

2339-b15	Temperature sensor fault – inlet indoor unit (T14)
2340-b7	Pressure sensor fault – heating system (T25)
2340-b8	Flow sensor fault – heating system (T26)
2340-b9	SD card fault
2341-b4	Low pressure – heating system

12.2.3. ERROR LIST



2114-b3	High pressure
2114-b7	Low pressure
2114-b8	CP phase control
2114-b9	No water flow
2114-b14	Efficiency
2115-b0	Failure module 1
2115-b5	Communication failure – outdoor unit
2115-b8	Max. number of defrosting
2119-b14	No model set
2119-b15	Outdoor unit fault
2335-b3	AC over voltage fault
2335-b4	AC under voltage fault
2335-b8	Input loss of phase fault

Kronoterm d.o.o.

Trnava 5e, 3303 Gomilsko, SLO

T +386 3 703 16 20

www.kronoterm.com

info@kronoterm.com